




# Asus W2W-A1 Speaker Replacement

Replace the speakers on your Asus W2W-A1.

Written By: Nolan Schock

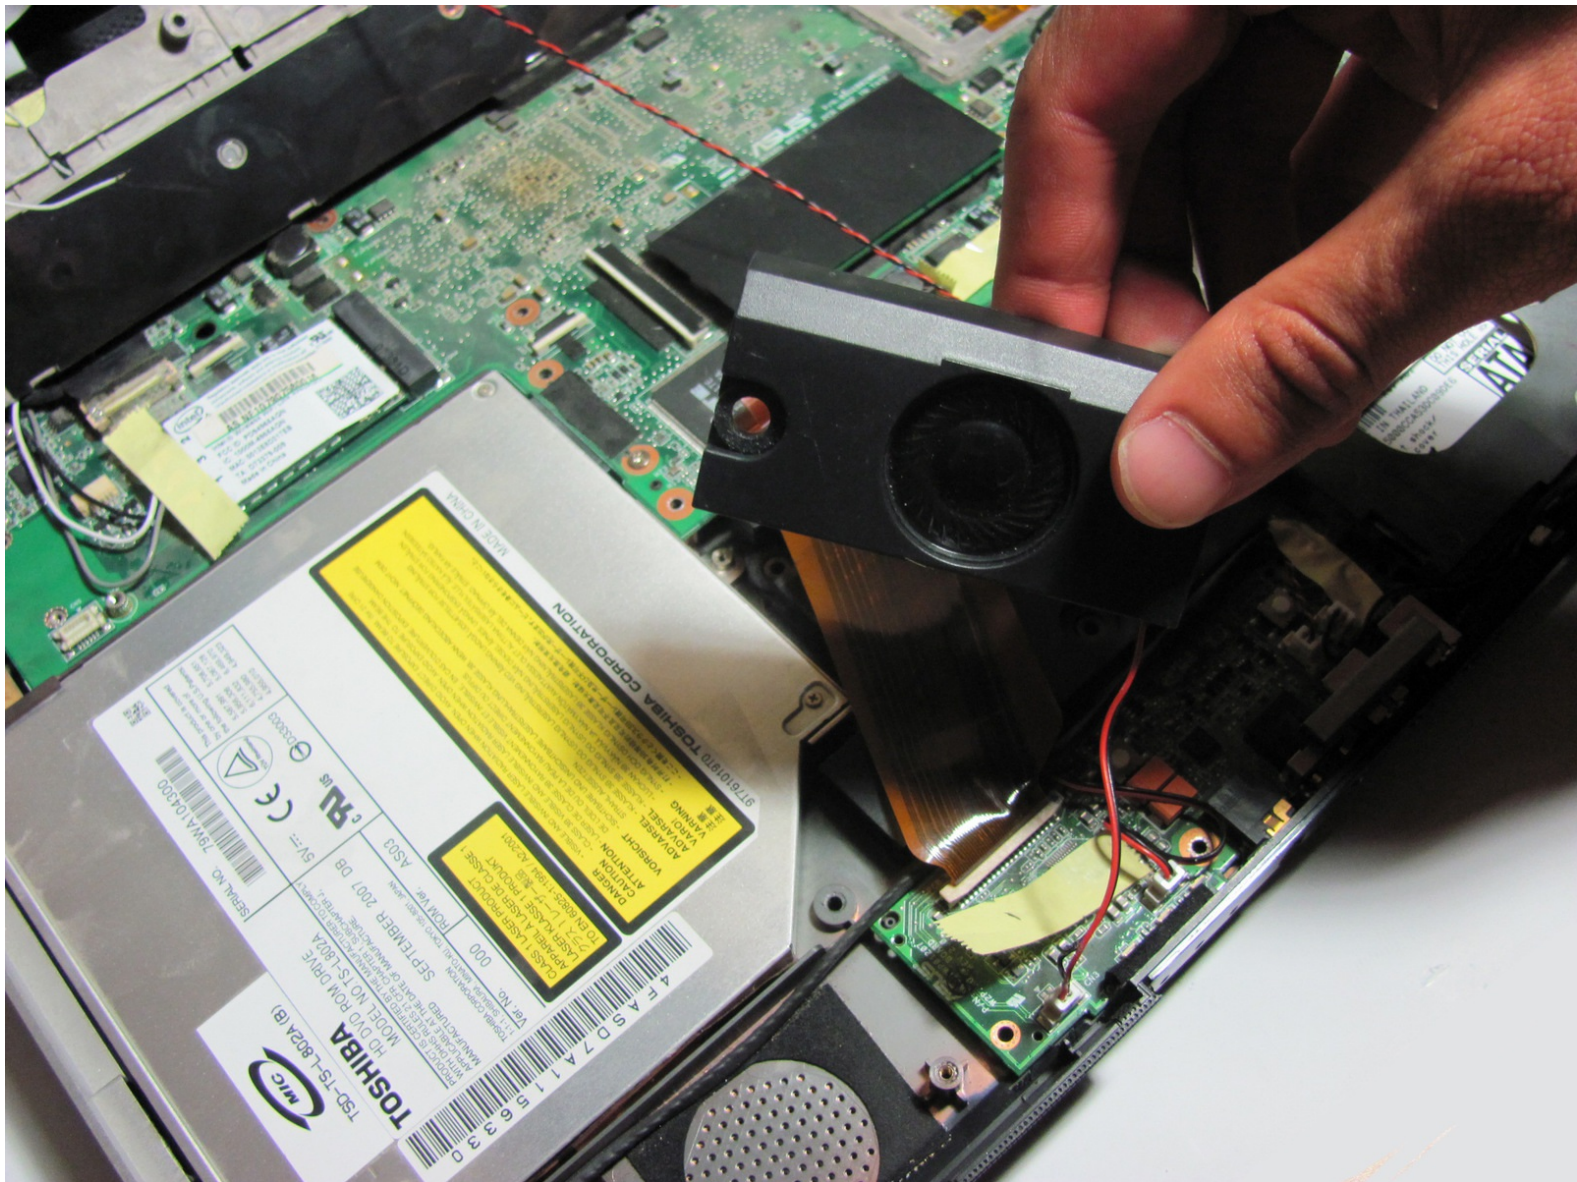



 
## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-






- ## Step 2



## Step 3



- Once the panel is removed, use the spudger to pry out the keyboard.

 Do not fully remove, for the keyboard is still attached to the ribbon cable.

## Step 4




- Detach the ribbon cable from the keyboard by pulling the end of the ribbon cable that is attached inside of the laptop.

 Be sure to detach from the root rather than from near the middle. It should slide out with ease.

- Now you can fully remove the keyboard from the laptop.





## Step 5 — Front Panel

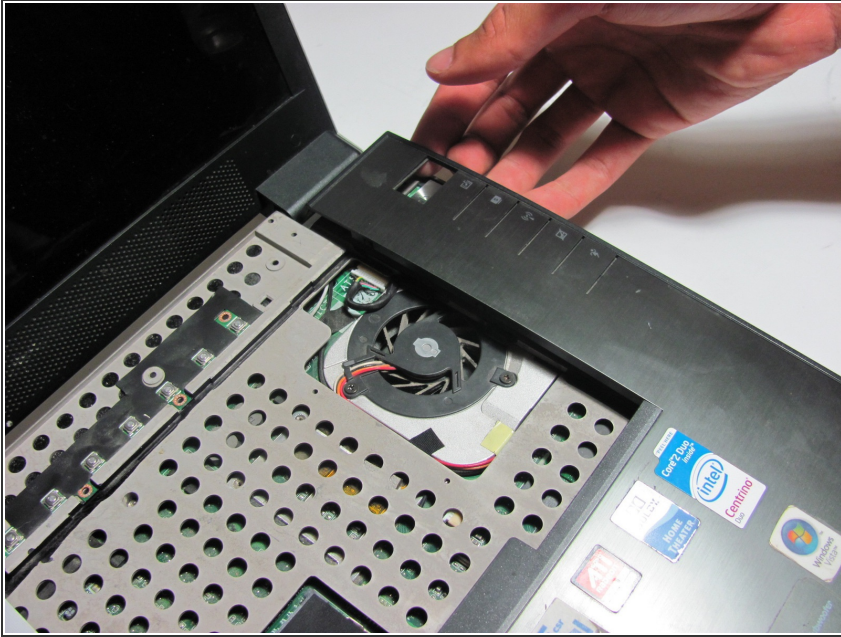


- Place your fingers or a spudger between the front panel and the rest of the laptop.
- Pull upwards gently to detach the side you are grabbing.
- Repeat on the other side until the panel easily peels off the laptop.

## Step 6 — Touchpad

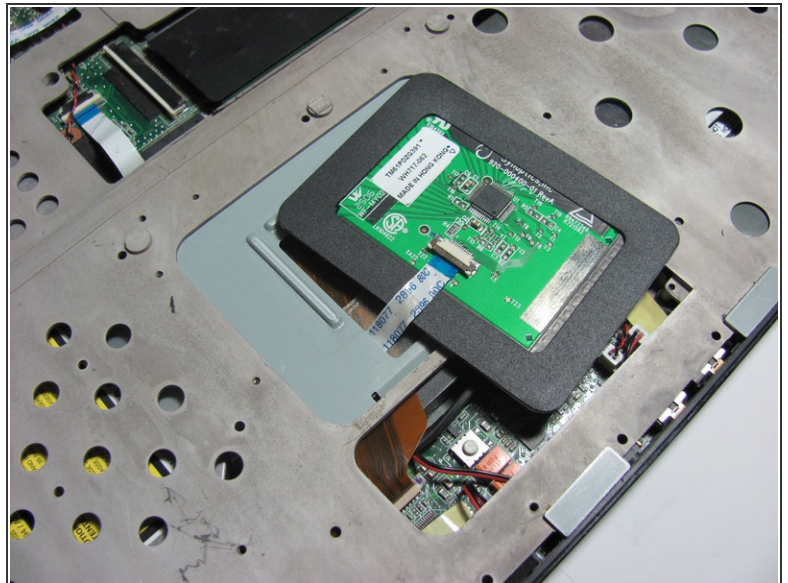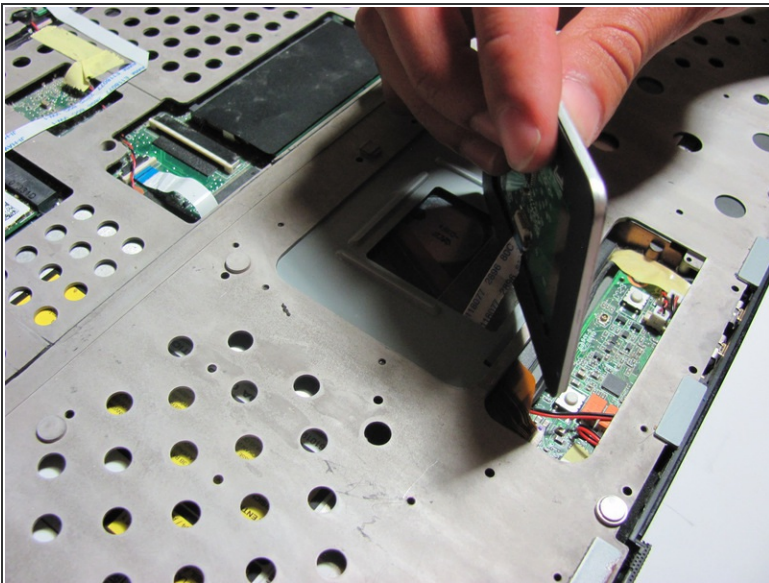


- The touchpad should be loosely attached to the rest of the laptop by a ribbon cable.

## Step 7

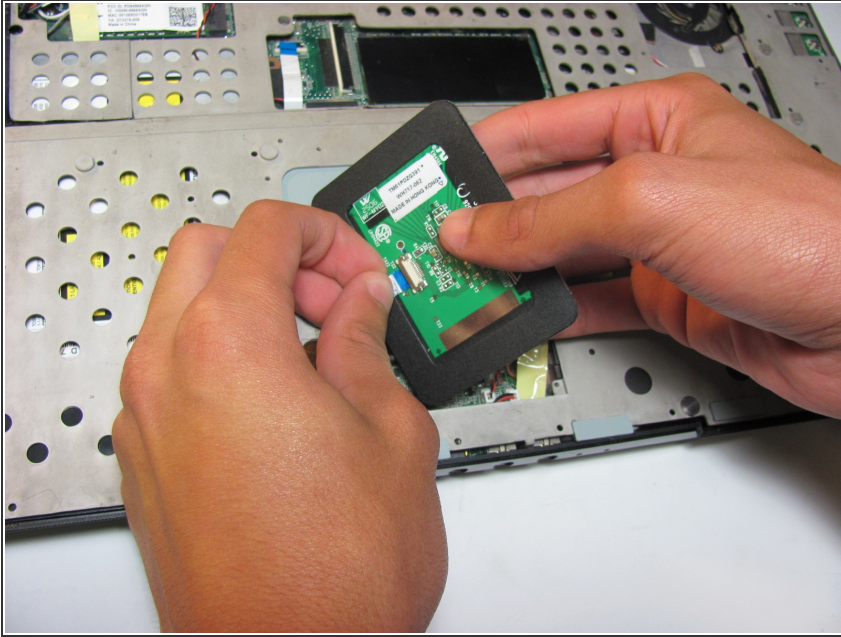

- Gently pull the ribbon cable out of its socket attached to the touchpad.
- You are now able to remove the touchpad.

## Step 8 — Protective Cover

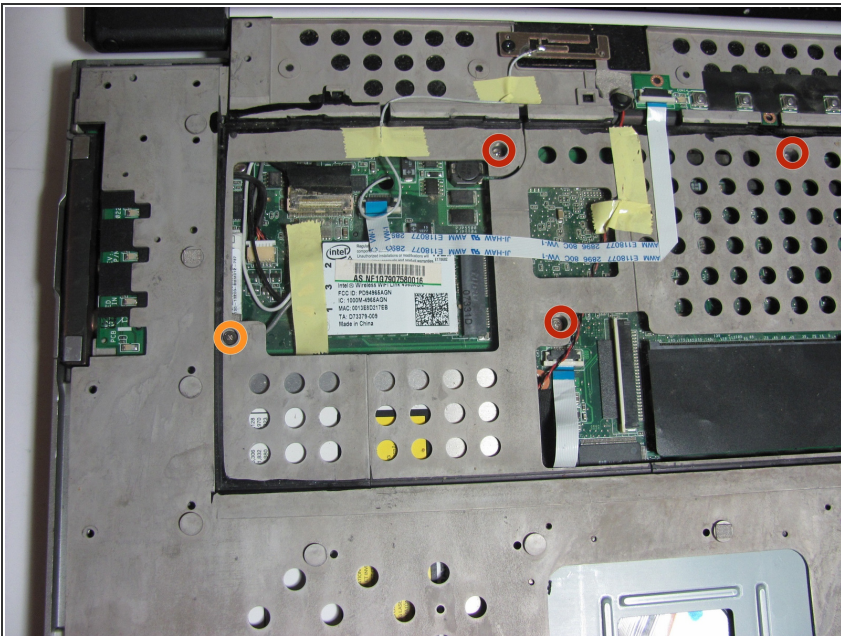


- Unscrew the 3 13 mm Phillips screws on the surface of the panel.
- Unscrew the 4 mm Phillips screw beneath the panel.




## Step 9



 There are many different types of screws in this step so make sure to arrange the screws by their different sizes.

- Unscrew the six 17 mm Phillips head screws on the stands on the back and the 2 "A" screws of the same size adjacent to the stands.
- Unscrew the two C Phillips head screws on the hard drive panel. There is also one more C screw in the upper right corner of the laptop as shown.
- Unscrew the eight 8mm lock phillips screws and the screws along the outside of the laptop.
- Unscrew the three 3mm E Phillips screw and the one 3mm D Phillips screw.
- Unscrew the 5mm Phillips head screw that lies just above the D screw.

## Step 10

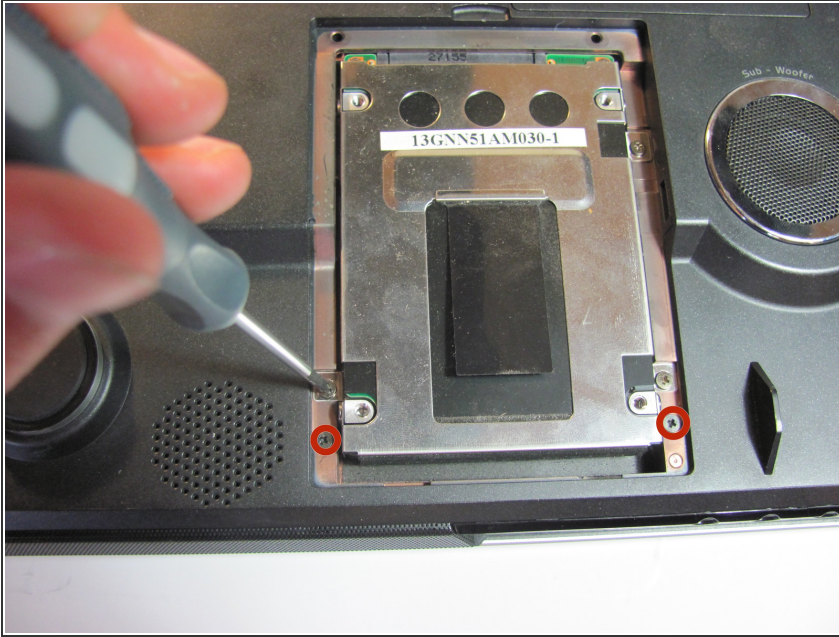

- Unscrew the two 8 mm Phillips screws beneath the hard drive panel.
- ⓘ After finishing this step, flip the laptop over.


## Step 11



- Everything should now be loose enough for you to start removing the panel.
- ⚠ Do not fully remove the panel, for there are still ribbons attached on the inside.



## Step 12

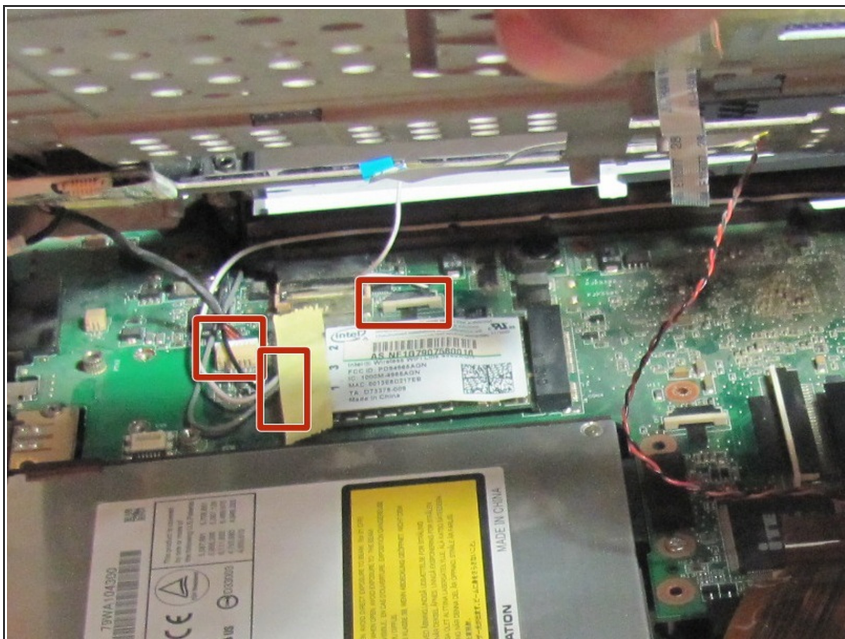


- Carefully remove the ribbons from the base.
- Then you can lift the panel to access the components beneath.

## Step 13 — Speaker



- Remove the 2 4 mm, wide Phillips screws per speaker holding in the two speakers at the lower end of the device.



## Step 14

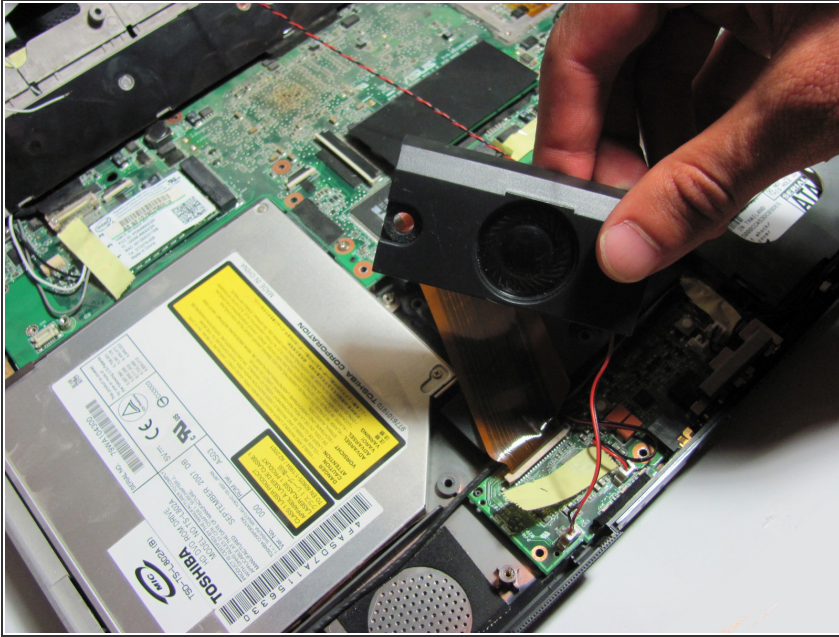

- Lift up the speakers to separate from the device.

⚠ The speakers are connected to the device by a cable. Be careful not to rip this off.

## Step 15

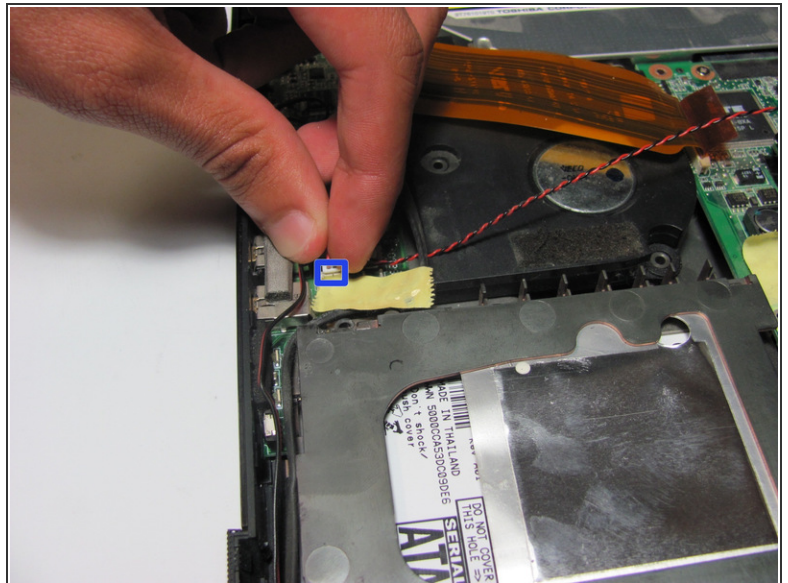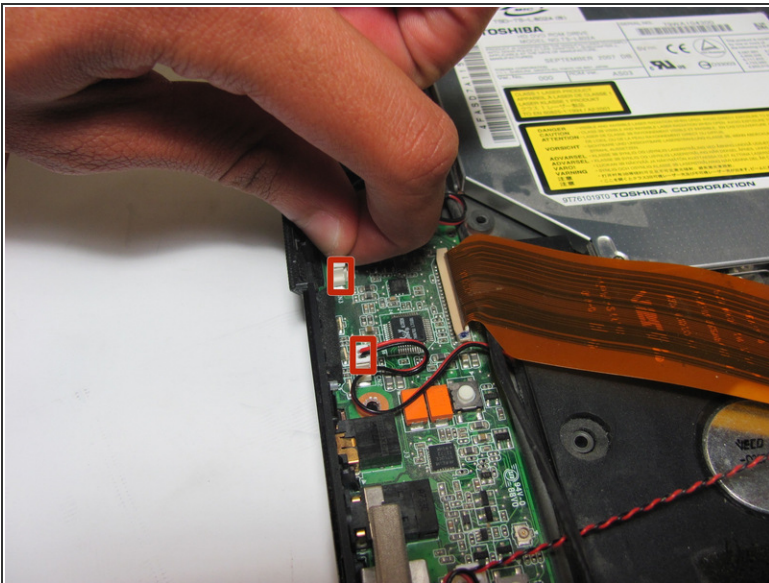

- Grab the cable by the white connection to the laptop, and gently pull to disconnect.

To reassemble your device, follow these instructions in reverse order.



